

# M2M CONTROL CX360

## Technical Manual

Version 2.5



**\* \* \* THIS PAGE IS INTENTIONALLY LEFT BLANK \* \* \***

## Introduction

The **M2M Control CX360** is a powerful M2M/IoT Gateway device, which rests on an entirely new hardware and software architecture representing a major leap in functionality, power, openness and performance. The CX360 has been designed for the most demanding M2M and Internet of Things applications which demand the absolutely most advanced product available on the market.

The device is based on the new **NX32L** (NX32 for Linux) architecture, that embraces many new technologies and at the same time maintains full backward compatibility to the M2M Control Pro Series devices, that ensures already implemented and tested applications can execute without changes.

The **M2M Control CX360** device is an industrial DIN rail device, that has been designed from the ground up for industrial M2M / IoT applications with its strong on-board I/O capabilities and multiple communication interfaces such as: worldwide LTE (Cat.4) Cellular Engines (with fallback to 3G and 2G), Wi-Fi, Bluetooth Classic / LowEnergy, CAN bus, Ethernet, dual RS232, dual RS485 and 1-Wire.

It also sports an USB host port interface allowing expansion of the device with accessories such as: GPS, RFID reader, additional Ethernet port and additional RS232/RS485 ports

The on-board I/O system can be expanded almost indefinitely and completely transparently by adding Modbus I/O modules. This unique I/O expansion capability, combined with the ability to operate as a Modbus master and slave simultaneously, positions the CX360 as the perfect product for SCADA-like applications.

The **M2M Control CX360** device has been designed to meet the ever increasing challenges on security, in that it offers full TLS on all major protocols and includes a hardened protected execution environment with dual-boot and automatic fallback and recovery.

This manual contains technical documentation covering the installation and usage of the **M2M Control CX360** device. For detailed information on the programming and software configuration of the product please refer to the M2M Control IDE documentation.

In our documentation the term “**RTCU**” stands for **Remote Terminal Control Unit** and constitutes a unique combination of a programmable control-unit with the possibility of both digital- and analog I/O plus cellular communication (4G/3G/2G, GSM).

For detailed information on the powerful M2M CONTROL RTCU Platform, please refer to the ***M2M CONTROL RTCU Platform datasheet***.



## Technical Highlights

### Platform:

- Based on the **RTCU M2M Platform**.
- **NX32L (NX32 for Linux)** execution architecture.
  - M2M Control IDE development tool.
  - Operates under a full and highly optimized Linux variant.
  - Open and extendable with Platform SDK.

### Hardware Core:

- Cortex-A5 32-bit ARM processor operating at 500 Mhz.
- Hardware floating point and DSP instructions.
- 128 MByte LP-DDR RAM.
- 512 MByte NAND Flash (file-systems).
- 16 MByte NOR flash (system boot).
- 8 MB Data flash (persistent memory/data logger).
- 128 KB SRAM with battery back-up (unlimited endurance).
- Real-time clock with battery back-up.

### Security:

- Embedded firewall.
- TLS/SSL support with full certificate management.
- TLS/SSL support for all major TCP protocols, such as SMTP, MQTT and sockets.
- Hardware encryption/authentication:  
AES-128, AES-192, AES-256, DES, Triple DES, HASH, RND and RSA signature.

### Wireless Communication:

- **Worldwide** LTE Cat.4 Multi-Band Cellular Engine (4G)
- Wireless LAN (Wi-Fi).
- Classic and Low-Energy Bluetooth.
- Optional: Wireless M-Bus, ZigBee and KNX.

### Wired Communication:

- 100 Mbps Ethernet LAN interface.
- Full CAN 2.0B controller with hardware filtering and multi-speed support.
- 1-Wire bus for accessories such as ID-button reader, temperature sensors, etc.
- USB host port for expandability.
- 2 x RS232 channels and 2 x RS485 channels.
- MODBUS RTU and MODBUS TCP support

### I/O Interfaces:

- 4 x analog inputs and 4 x analog outputs with 0..10 volt / 0..20 mA.
- 8 x digital inputs and 8 x high-power solid-state digital outputs.
- Up to 4 digital inputs can be configured as IEC62053-31 Class A compliant.
- Expandable I/O with standard Modbus modules.

### User Interaction:

- Graphical 240x160 pixels White-on-Blue display.
- Status-bar with information on the state of all interfaces.
- Touch-screen with virtual buttons.
- High-speed Mini-USB service-port connector.

### Audio:

- Fully digitized audio system.
- Transfer, store and play audio.
- Line and amplified speaker output.
- Microphone input.
- Digitized GSM audio.
- DTMF support for Interactive Voice Response applications.

### Storage:

- Internal flash drive with up-to 512 MByte capacity.
- Persistent memory and circular data logger.
- Standard SD-CARD reader.
- USB flash media

### Power and Battery:

- Operating voltage from 8 to 36VDC.
- On-board 2Ah Li-Ion battery with intelligent charging.

### Encapsulation:

- Housed in a standard 9M DIN-Rail enclosure.

### Regulatory Approvals:

- 2014/53/EU, 2014/30/EU and 2011/65/EU.



**\* \* \* THIS PAGE IS INTENTIONALLY LEFT BLANK \* \* \***

## Table of contents

Introduction.....	3
Technical Highlights .....	5
Important Information.....	10
Defects Liability Terms .....	10
Feedback.....	10
Safety .....	11
Intended use .....	11
Technical Limits .....	12
Responsibility of the User/Operator .....	12
Qualification of the Personal .....	12
Instructions for Transport.....	12
Environmental Protection.....	13
Safety Instructions for Electrical Installation .....	13
General Safety Instructions.....	13
M2M Control CX 360 Overview .....	15
Front-side view:.....	16
Bottom-side view:.....	17
Top-side view: .....	17
Power Supply.....	20
Mini USB-B Connector .....	21
Ethernet Connector .....	21
USB Host Port Connector.....	21
Digital Inputs with S0.....	23
S0 compliant inputs ( <i>IEC62053-31, Class A compatible</i> ).....	23
Wakeup Inputs.....	24
Analog Inputs .....	25
Analog Outputs .....	26
Analog Input/Output Mode Selection Switches .....	27
CAN Bus Port .....	29
RS232 Port 1 .....	30
RS232 Port 2 .....	30
RS485 Communication Ports (EIA/TIA-485-A compatible) .....	31
RS485 Port 1 .....	31
RS485 port 2 .....	31
1-Wire Bus .....	32
DC-Out.....	32
LCD Display with Touch.....	34
Graphical LCD Display .....	34
GSM.....	35
Network.....	36
The Clock.....	38
System Menu.....	39
Set Time .....	39
Config.....	39



Jumpers.....	40
Log out.....	41
About .....	41
LED Indicators .....	41
User LED A and B .....	41
System LED S1 and S2 .....	41
DIP and Reset-Switches .....	43
DIP-switch.....	43
System switch (RST).....	43
Real Time Clock .....	43
Battery Backup Power.....	44
Rechargeable Li-Ion Battery.....	44
Lithium Battery.....	45
External Li-Ion Battery (Optional) .....	45
Cellular Engine .....	46
Wi-Fi and Bluetooth .....	46
Bluetooth Technical Data .....	46
SIM-Card.....	46
Antennas.....	47
LTE/UMTS/GSM Antenna .....	47
Wi-Fi / Bluetooth Antenna .....	47
SD-CARD reader .....	48
Approved SD-Card's.....	48
Product Identification Label with Barcode .....	49
Power consumption .....	50
Appendix A – Removing the Protective Film.....	51
Appendix B – Installing the SD-CARD .....	51
Appendix C – Installing the SIM-Card .....	52
Appendix D - Open Source Disclaimer .....	53
M2M Control CX360 Specifications .....	54

## Important Information

Our products are designed for professional use and therefore this manual assumes technical knowledge and practice working with such products.

This documentation does not entail any guarantee on the part of “M2M Control” with respect to technical processes described in the manual or any product characteristics set out in the manual. We do not accept any liability for any printing errors or other inaccuracies in the manual, unless it can be proven, that we are aware of such errors or inaccuracies, or that we are unaware of these as a result of gross negligence and “M2M Control” has failed to eliminate these errors or inaccuracies for this reason.

This product is a complex and sensitive electronic product. Please act carefully and ensure that only qualified personnel will handle and use the device. In the event of damage to the device caused by failure to observe the information in this manual and on the device, “M2M Control” shall not be required to honor a warranty claim even during the warranty period and shall be exempted from the statutory accident liability obligation. Any attempts to repair or modify the product also voids all warranty claims. Do not open the product. There are no user-serviceable parts inside.

### Defects Liability Terms

A usage not according to the intended purpose, an ignorance of this documentation, the use of insufficiently qualified personnel as well as unauthorized modifications exclude the liability of the manufacturer for damages resulting from this. The liability of the manufacturer ceases to exist. The regulations of our Delivery and Purchasing Conditions are effective. These can be found on our website (<http://www.m2mcontrol.de/de/kontakt/agb.html/>) .

### Feedback

We are permanently improving our products and the associated technical documentation. Your feedback is very helpful for this. Please tell us what you like in particular on our products and publications and what can be improved from your point of view. We highly appreciate your suggestions and will include them in our work to support you and all our customers.

Please contact us for any technical or commercial enquiries:

**Infranet Technologies GmbH**  
**Tempowerkring 19**  
**21079 Hamburg, Germany**

**Phone:** +49 40 696 47 – 260

**Support:** [support@m2mcontrol.de](mailto:support@m2mcontrol.de)

## Safety

The Safety section provides an overview about the safety instructions, which must be observed for the operation of this product.

The product is constructed according to the currently valid state-of-the-art technology and reliable in operation. It has been checked and left the factory in flawless condition concerning safety. In order to maintain this condition during the service life, the instructions of the valid publications and certificates must be observed and followed.

It is necessary to adhere to the general safety instructions must when operating the product. The descriptions of processes and operation procedures are provided with precise safety instructions in the respective sections in addition to the general safety instructions. Moreover, the local accident prevention regulations and general safety regulations for the operating conditions of the device are effective. An optimum protection of the personnel and the environment from hazards as well as a safe and fault-free operation of the product is only possible if all safety instructions are observed.

### Intended use

This product may only be used for the purposes specified in the function overview. In addition, it may be used for the following purposes:

- Usage and mounting in an industrial cabinet.
- Switching and data transmission functions in machines according to the machine directive 2006/42/EC.
- Usage as PLC, data logger and data transmission device.

The product may not be used for the following purposes and used or operated under the following conditions:

- Controlling or switching of machines and systems, which do not comply with the directive 2006/42/EC.
- Usage, controlling, switching and data transmission of machines and systems, which are operated in explosive atmospheres.
- Controlling, switching and data transmission of machines, which may involve risks to life and limb due to their functions or when a breakdown occurs.

## Technical Limits

The product is only intended for the use within the permissible technical limits specified in the data sheets. The following permissible limits must be observed:

- The ambient temperature limits must not be fallen below or exceeded.
- The supply voltage range must not be fallen below or exceeded.
- The maximum humidity must not be exceeded and condensate formation must be prevented.
- The maximum switching voltage and the maximum switching current load must not be exceeded.
- The maximum input voltage and the maximum input current must not be exceeded.

## Responsibility of the User/Operator

As a matter of principle, the operator must observe the legal regulations, which are valid in his country, concerning operation, functional test, repair and maintenance of electrical devices.

## Qualification of the Personal

The installation, commissioning and maintenance of the product must only be performed by trained expert personnel, which has been authorized by the plant operator. The expert personnel must have read and understood this documentation and observe the instructions.

Electrical connection and commissioning must only be performed by a qualified person, who is able to work on electrical installations and identify and avoid possible hazards independently, based on professional training, knowledge and experience as well as knowledge of the relevant standards and regulations.

## Instructions for Transport

The following instructions must be observed: Do not expose the product to moisture and other potential hazardous environmental conditions (radiation, gases, etc.) during transport and storage. Pack product accordingly. Pack product sufficiently to protect it against shocks during transport and storage, e.g. using air-cushioned packing material.

Check product for possible damages, which might have been caused by improper transport, before installation. Transport damages must be noted down to the shipping documents. All claims or damages must be filed immediately and before installation against the carrier or party responsible for the storage.

## Environmental Protection

Dispose the product and the packaging according to the relevant environmental protection regulations. The Waste Disposal section in this manual contains notes about disposing the product. Separate the packaging components of cardboard and paper as well as plastic and deliver them to the respective collection systems for recycling.

## Safety Instructions for Electrical Installation

The electrical connection must only be made by authorized expert personnel according to the wiring diagrams. The notes to the electrical connection in the manual must be observed. Otherwise, the protection category might be affected.

The safe disconnection of circuits, which are hazardous when touched, is only ensured if the connected devices meet the requirements of VDE T.101 (Basic requirements for safe disconnection). The supply lines are to be routed apart from circuits, which are hazardous when touched, or isolated additionally for a safe disconnection.

An easily accessible isolation device that disconnects all lines must be installed prior to commissioning of the device to be able to isolate it completely from power supply.

## General Safety Instructions

### Caution!



Moisture and liquids from the environment may seep into the interior of the product!

Fire hazard and damage of the product.

The product must not be used in wet or damp environments, or in the direct vicinity of water. Install the product at a dry location, protected from water spray. Disconnect the power supply before you perform any work on a device which may have been in contact with moisture.

### Caution!



Short circuits and damage due to improper repairs and modifications as well as opening of maintenance areas.

Fire hazard and damage of the product.

It is not permitted to open the product for repair or modification.

**Caution!**



Overcurrent of the device supply!

Fire hazard and damage of the product due to overcurrent.  
The product must be secured with a suitable fuse against currents.

**Caution!**



Overvoltage and voltage peaks from the mains supply!

Fire hazard and damage of the product due to overvoltage.  
Install suitable overvoltage protection.

**Caution!**



Damage due to chemicals!

Ketones and chlorinated hydrocarbons dissolve the plastic housing and damage the surface of the device.  
Never let the device come into contact with ketones (e.g. acetone) or chlorinated hydrocarbons, such as dichloromethane.

**Caution!**



Distance from antennas to persons!

A too low distance from cellular antennas to persons can affect the health.

Please observe to keep a minimum distance of 20 cm between the cellular antenna and persons during operation.

M2M Control CX 360 Overview





All interfaces are conveniently located at the exterior of the CX360 product, and there are no interfaces or user-serviceable parts inside the device.


Most connections to external equipment are found on two-way pluggable terminal blocks located on the top and bottom sides of the M2M Control CX360 device.

On the back-side of the device there are jumpers for selection of analog mode and external battery selection.

The M2M Control CX360 uses two-way terminal blocks for maximum flexibility and easy installation. The removable parts can be detached either by hand or using a suitable tool. To avoid damage to the screws please use a suitable screwdriver, when attaching wires to the terminals.

On the label of the device the layout of the terminal blocks are documented and all other interfaces are conveniently labeled with their usage.

**Front-side view:**

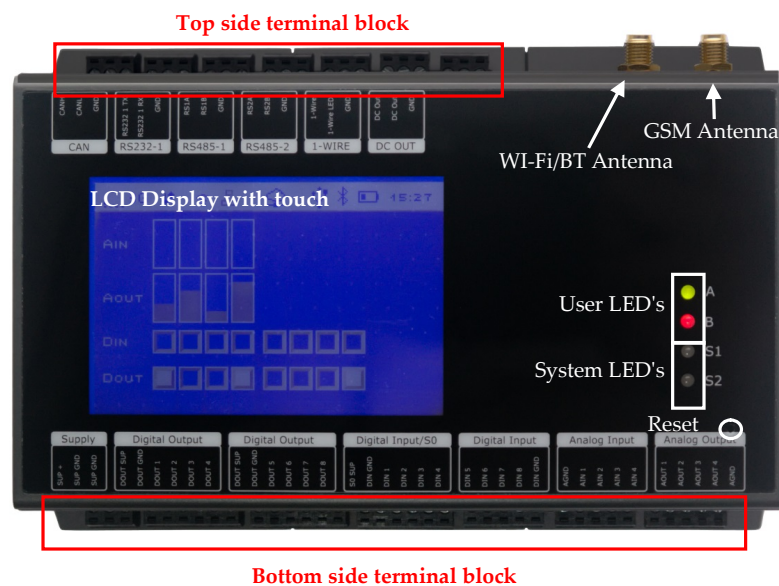

On the front side of the device a large LCD display with touch screen is found, that shows a detailed status of the device. Please refer to the section on the *LCD Display with Touch* for detailed information on the LCD display. Also found on the front side of the device are the User and system LED's and the reset switch.



### Bottom-side view:



Bottom terminal block side view

On the bottom side terminal blocks the following interfaces are found:  
 Power, digital inputs, digital outputs, analog inputs and analog outputs.

Above the terminal blocks the following interfaces are found:  
 SD-CARD reader, audio jacks, SIM-card reader and the mini-USB service port.

### Top-side view:



Top terminal block side view

On the top side terminal blocks the following interfaces are to be found:  
 CAN bus, 1-Wire bus, RS485 ports, DC-out and connection for an optional external battery.

Above the terminal blocks the following interfaces are found:  
 SMA connector for LTE/GSM, RP-SMA connector for Wi-Fi / Bluetooth, USB host port, Ethernet connector, RS232 port and finally DIP-switches.

## External Interfaces

### Terminal Blocks Signal Overview

#### Pin 1 - 36 overview

Group	Pin	Name	Description
1	1	SUPP	Power supply, positive (+) connection
	2	PGND	Power ground, negative (-) connection
	3	PGND	Power ground, negative (-) connection
2	4	DOUT SUPP	Digital output isolated supply for the digital outputs 1-4
	5	DOUT GND	Digital output isolated ground for the digital outputs 1-4
	6	DOUT1	Digital Output 1
	7	DOUT2	Digital Output 2
	8	DOUT3	Digital Output 3
	9	DOUT4	Digital Output 4
3	10	DOUT SUPP	Digital output isolated supply for the digital outputs 5-8
	11	DOUT GND	Digital output isolated ground for the digital outputs 5-8
	12	DOUT5	Digital Output 5
	13	DOUT6	Digital Output 6
	14	DOUT7	Digital Output 7
	15	DOUT8	Digital Output 8
4	16	S0 SUPP	S0 circuit isolated supply, positive (+) terminal
	17	S0 GND	S0 circuit isolated ground, negative (-) terminal
	18	DIN1	Digital input 1 / S0 input 1 / Wake-up ( <i>ignition</i> ) input
	19	DIN2	Digital input 2 / S0 input 2
	20	DIN3	Digital input 3 / S0 input 3
	21	DIN4	Digital input 4 / S0 input 4
5	22	DIN5	Digital input 5
	23	DIN6	Digital input 6
	24	DIN7	Digital input 7
	25	DIN8	Digital input 8
	26	DIN GND	Digital input isolated ground
6	27	AGND	Analog ground
	28	AIN 1	Analog input 1
	29	AIN 2	Analog input 2
	30	AIN 3	Analog input 3
	31	AIN 4	Analog input 4
7	32	AOUT 1	Analog output 1
	33	AOUT2	Analog output 2
	34	AOUT3	Analog output 3
	35	AOUT4	Analog output 4
	36	AGND	Analog ground

**Pin 37 - 57 overview**

Group	Pin	Name	Description
8	37	CAN-H	CAN-bus H-signal
	38	CAN-L	CAN-Bus L-signal
	39	SGND	Signal ground
9	40	UART1_TXD	Transmit data from serial port 1, RS232 compatible
	41	UART1_RXD	Receive data for serial port 1, RS232 compatible
	42	SGND	Signal ground
10	43	RS485_1+	RS485 non-inverting signal for RS485 port 1
	44	RS485_1-	RS485 inverting signal for RS485 port 1
	45	SGND	Signal ground
11	46	RS485_2+	RS485 non-inverting signal for RS485 port 2
	47	RS485_2-	RS485 inverting signal for RS485 port 2
	48	SGND	Signal ground
12	49	1WIRE	1-Wire bus for accessories such as ID-button/temperature sensors
	50	1WIRE-LED	1-Wire ID-button LED
	51	SGND	Signal ground
13	52	DCOUT	+5V / 300mA DC-OUT for external equipment (tied together internally)
	53	DCOUT	+5V / 300mA DC-OUT for external equipment (tied together internally)
	54	SGND	Signal ground
14	55	XBAT+	External battery positive (+) connection
	56	GND	External battery negative (-) connection
	57	XBAT NTC	External battery NTC temperature sensor connection

## Power Supply

The M2M Control CX360 device must be supplied with 8..36 VDC from an external DC power source. Positive power is applied to the SUP+ pin and ground is connected to the SUP GND pin.

There are five different ground labels for ground connections:

- 1) Supply Ground (SUP GND)
- 2) Signal Ground (GND)
- 3) Analog Ground (AGND)
- 4) Digital Input Ground (DIN GND)
- 5) Digital Output Ground (DOUT GND).

The signal and analog grounds are filtered from the power ground. The analog ground is used as a low noise analog ground reference for the analog inputs and outputs. Power ground must only be used as a power supply return path. The digital input ground are optically isolated from the system ground. The digital input ground is also group-wise optically isolated from each other on different terminal groups.

The M2M Control CX360 is protected against wrong polarity. If a chassis or system ground is connected to either GND or AGND, a wrong polarity on the supply lines will destroy the internal GND connection.

The M2M Control CX360 contains an internal high capacity backup battery, which will supply the RTCU if the external power supply fails or is disconnected. By default, the RTCU is powered down, when a power fail occurs. This setting, however, can be changed. Please consult the M2M Control IDE on-line help for more information. When the wakeup/ignition inputs are activated with a logical high, the CX360 device will wake-up if it was in power-down mode.

### Please Note:

- Minimum 14 VDC supply is necessary for 0-10V analog output configuration.
- Exceeding the range of power supply may cause faulty operation or damage the module!

### Power supply pins

Group	Pin	Name	Description
1	1	SUP +	Power supply, positive (+) connection
	2	SUP GND	Power ground, negative (-) connection
	3	SUP GND	Power ground, negative (-) connection

### **Mini USB-B Connector**

This USB port is for programming and communication with the M2M Control IDE (RACP compliant application). A standard USB cable can be used between the device and the PC.

### **Ethernet Connector**

This is a standard 10Base-T/100Base-TX IEEE 802.3 compliant RJ45 Ethernet connector.

Please use an appropriate connector and cable, such as a standard CAT-5 twisted pair patch cable

### **USB Host Port Connector**

This is a standard full-speed USB-A host port connector, and used for communication with accessories connected to the host port. This port is supplied internally and current consumption is limited to 500mA.

Accessories that can be connected to the USB Host port includes: RFID reader, GPS receiver, additional LAN port, additional RS232/RS485 ports, Camera and industrial USB hubs.

## Digital Outputs

The digital outputs control eight “high-side” switches. They function like a contact, where one side is connected to the positive supply of the RTCU device and the other is the output. The switches are protected against short circuit, ESD and electronic kickback from inductive loads such as relays etc. The maximum switchable inductance is 20mH and must not be exceeded.

The digital outputs are supplied from the DOUT SUP+ and DOUT GND power pins for each group independent of the system supply. Digital outputs are isolated from the system and from each digital output groups. With this design it is entirely possible and fully supported, that the digital outputs operate one voltage supply and the device on another voltage supply.

The M2M Control CX360 device offers power management, which makes it possible to have one or more outputs enabled while the RTCU is in low-power mode. Please consult the M2M Control IDE on-line help for more information.

### Digital output pins

Group	Pin	Name	Description
1	4	DOUT SUP	Digital output supply, positive (+) connection
	5	DOUT GND	Digital output ground, negative (-) connection
2	6	DOUT1	Digital output 1
	7	DOUT2	Digital output 2
	8	DOUT3	Digital output 3
	9	DOUT4	Digital output 4
3	10	DOUT SUP	Digital output supply, positive (+) connection
	11	DOUT GND	Digital output ground, negative (-) connection
	12	DOUT5	Digital output 5
	13	DOUT6	Digital output 6
	14	DOUT7	Digital output 7
	15	DOUT8	Digital output 8

### Specification for each digital output

Type	Min.	Max.	Unit	
Solid state	5.5	36	VDC	Short-circuit, Overload, Overvoltage, ESD,
	-	1.5	A	Inductive kick-back protected up to 20mH (single pulse).
	-	280	mΩ	On-state resistor per channel

## Digital Inputs with S0

The eight digital inputs are all low-pass filtered (105 kHz) and transient-protected. The digital inputs are divided in two groups. Digital input 1-4 can be configured as S0 input (IEC62053-31, Class A) by supplying the S0 circuit through the S0 SUP and DIN GND 1 terminal pins and enabling the S0 interface through the user application. When not supplied the inputs act as normal digital inputs. The digital inputs 5-8 are normal digital inputs. To activate the normal digital inputs connect a positive voltage between the corresponding input (DINx) and DIN GND on the corresponding terminal connector group.

The digital input 1 can act as wakeup input sources.

### **S0 compliant inputs (IEC62053-31, Class A compatible)**

In S0 configuration the relevant CX360 input will act as a 'pulse input device', and a current is supplied into the input connector so that a simple switch between DIN GND 1 and the appropriate input will activate it. This is used in most electricity metering equipment.

**Please note:** The S0 auxiliary supply input located on the terminal group 4 must be supplied with a minimum of 16 VDC for the S0 mode to work according IEC62053-31, Class A. S0 must also be enabled from the application in order to work as an S0 compliant input. DIN GND 1 and DIN GND 2 are isolated and **not** tied together internally.

## Wakeup Inputs

The digital inputs 1-3 are special inputs in a way that they also function as the wakeup inputs. If the inputs are activated with a logical high or low (Wait For Event mode only), when the CX360 is in low-power mode, it will wake-up the device. A power apply will also wake the device up if it is in power-down mode or in Wait For Event mode with power Apply and/or ignition selected for wakeup. The input is de-bounced with a period of 1 ms, when used as wake-up source in power-down mode. So any logical level applied to this input must be greater than 1 ms to be valid.

The power management allows for the possibility of configuring a wakeup on one or more digital inputs with individually configured falling- or rising edge detection. Please consult the M2M Control IDE on-line help for more information.

## Digital input pins

Group	Pin	Name	Description	Condition
4	16	S0 SUP	S0 auxiliary supply	
	17	DIN GND	Digital input / S0 ground	
	18	DIN1 / S0IN1	S0 input 1 Digital input 1	S0 supply applied, and enabled
	19	DIN2 / S0IN2	S0 input 2 Digital input 2	S0 supply applied, and enabled
	20	DIN3 / S0IN3	S0 input 3 Digital input 3	S0 supply applied, and enabled
	21	DIN4 / S0IN4	S0 input 4 Digital input 4	S0 supply applied, and enabled
	22	DIN5	Digital input 5	
5	23	DIN6	Digital input 6	
	24	DIN7	Digital input 7	
	25	DIN8	Digital input 8	
	26	DIN GND	Digital input ground	

## Specification for each digital input

	Min.	Typ.	Max.	Unit	
Logic "High"	8	12	40	VDC	Protected against transients and low-pass filtered
Logic "Low"	-5	-	3	VDC	
Cut-off frequency	-	105	-	kHz	
Bandwidth (standard)		12		kHz	@12V
Bandwidth (S0)		3		kHz	
Input impedance	-	3.3	-	kΩ	@ 12V



## Analog Inputs

The M2M Control CX360 device has four analog inputs, which can be configured individually to work either as voltage or current measurement inputs by using the configuration dip-switch, which is located on the back-side of the device. The range in voltage mode is 0-10 VDC and in current mode it is 0-20 mA. The conversion resolution is 12 bit.

By default the analog inputs are configured as voltage input, and are converted to a digital value with a resolution of 12-bit before being presented to the application (0..4095). Please consult the M2M Control IDE for further details.

The input signal is connected between AINx and AGND. AGND must be connected to the reference of the connected equipment. Please be aware, that deviations may occur, as the system is very noise sensitive. Avoid long, unshielded wires and high current fast changing signals routed parallel to the analog signals.

### Analog input pins

Group	Pin	Name	Description	Dip-switch state
6	27	AGND	Analog ground	
	28	AIN1	Analog input 1 – Voltage Analog input 1 – Current	Dip-switch 1 is off ( <i>default</i> ) Dip-switch 1 is on
	29	AIN2	Analog input 2 – Voltage Analog input 2 – Current	Dip-switch 2 is off ( <i>default</i> ) Dip-switch 2 is on
	30	AIN3	Analog input 3 – Voltage Analog input 3 – Current	Dip-switch 3 is off ( <i>default</i> ) Dip-switch 3 is on
	31	AIN4	Analog input 4 – Voltage Analog input 4 – Current	Dip-switch 4 is off ( <i>default</i> ) Dip-switch 4 is on

### Specification for each analog input (voltage mode)

	Min.	Typ.	Max.	Unit	
	0	-	10	VDC	Protected against transients and
Resolution	-	-	12	Bit	low-pass filtered
Accuracy	-	0.3	0.5	%FSR	The accuracy is based on
Cut-off frequency	-	4.5	-	kHz	measurements @ 25 °C
Input impedance	-	40	-	kΩ	

### Specification for each analog input (current mode)

	Min.	Typ.	Max.	Unit	
	0	-	20	mA	Protected against transients and
Resolution	-	-	12	Bit	low-pass filtered
Accuracy	-	0.3	0.5	%FSR	The accuracy is based on
Cut-off frequency	-	4.5	-	kHz	measurements @ 25 °C
Input impedance	-	500	-	Ω	

## Analog Outputs

The analog outputs are individually configurable to work either as voltage or current outputs. The range in voltage mode is 0-10 VDC and in current mode it is 0-20 mA. The resolution of the digital-to-analog converter is 12 bit or 4096 in decimal scale. The decimal value for 10V/20mA output is 4095 and 2047 for 5V/10mA.

As default the outputs are configured as voltage outputs. The dip-switch that configures the analog output as voltage or current is located at the back-side of the device.

The output signal is connected to external equipment between AOUTx and AGND. AGND must be connected to the reference of the connected equipment. Please be aware that, deviations may occur, as the system is very noise sensitive. Avoid long unshielded wires and large fast-changing signals routed parallel to the analog signals. In current mode the specifications for the analog output are only valid, if the maximum load is **250Ω**.

**Please note:** The M2M Control CX360 device must be supplied with minimum 14 VDC in order for the analog outputs to work according to specifications.

### Analog output pins

Group	Pin	Name	Description	Dip-switch position
7	32	AOUT1	Analog output 1 – Voltage	Position 1 ( <i>default</i> )
			Analog output 1 – Current	Position 2
	33	AOUT2	Analog output 2 – Voltage	Position 1 ( <i>default</i> )
			Analog output 2 – Current	Position 2
	34	AOUT3	Analog output 3 – Voltage	Position 1 ( <i>default</i> )
			Analog output 3 – Current	Position 2
	35	AOUT4	Analog output 4 – Voltage	Position 1 ( <i>default</i> )
			Analog output 4 – Current	Position 2
	36	AGND	Analog ground	

### Specification for each analog output (voltage mode)


	Min.	Typ.	Max.	Unit	
	0	-	10	VDC	Protected against transients
Resolution	-	-	12	Bit	
Accuracy	-	0.3	0.5	%FSR	The accuracy is based on measurements @ 25 °C
Load	500	-	-	Ω	

### Specification for each analog output (current mode)

	Min.	Typ.	Max.	Unit	
	0	-	20	mA	Protected against transients
Resolution	-	-	12	Bit	
Accuracy	-	0.3	0.5	%FSR	The accuracy is based on measurements @ 25 °C
Load	-	-	250	Ω	

**Analog Input/Output Mode Selection Switches**

The analog input and outputs can be operated in two modes: Voltage or Current mode. The mode for each individual analog input/output can be selected with dedicated DIP-switches, which are located on the back-side of the M2M Control CX360 device.

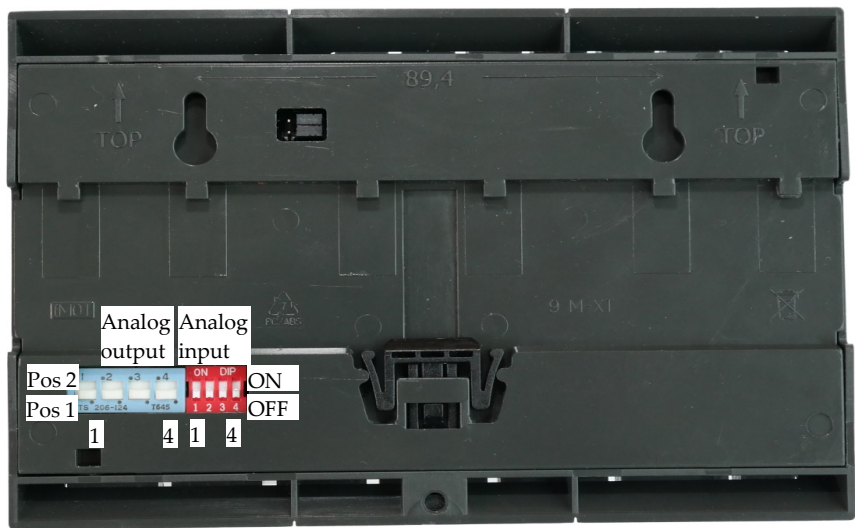

There is a "blue" DIP-switch block for selecting the mode of the analog outputs, and equally there is a "red" DIP-switch block for selecting the mode for the analog inputs.

**Analog output switch:**

Pin	Position	Function
1	Pos 1	Analog output 1 voltage output
	Pos 2	Analog output 1 current output
2	Pos 1	Analog output 2 voltage output
	Pos 2	Analog output 2 current output
3	Pos 1	Analog output 3 voltage output
	Pos 2	Analog output 3 current output
4	Pos 1	Analog output 4 voltage output
	Pos 2	Analog output 4 current output

**Analog output switch:**

Pin	Position	Function
1	ON	Analog input 1 as current input
	OFF	Analog input 1 as voltage input
2	ON	Analog input 2 as current input
	OFF	Analog input 2 as voltage input
3	ON	Analog input 3 as current input
	OFF	Analog input 3 as voltage input
4	ON	Analog input 4 as current input
	OFF	Analog input 4 as voltage input

## CAN Bus Port

The RTCU provides the physical layer for the CAN (Controller Area Network) serial communication interface in accordance with the ISO 11898 standard. The CAN bus is designed for high-speed (up to 1Mbit) robust communication in especially harsh environments like those found in the automotive industry.

The CAN interface can be connected to an existing CAN network with a common protocol like the J1939 or CANopen standard to retrieve information for surveillance or information purposes. The interface can also be used as a robust serial data link with a non-standard protocol. Please consult the M2M Control IDE documentation for more information.

The physical layer consists of a two wire (CAN-H and CAN-L) differential bus and a signal ground for reference.

If the RTCU is connected to a “non-existing” network, a 120<sup>1</sup> ohm resistor must be connected between CAN-H and CAN-L on each end of the transmission line in order to terminate it and avoid signal reflections. This resistor can be connected by activating the software jumper in the user application or in the system menu of the display. Please consult the M2M Control IDE document for the software jumper, and the display section in this document for detailed description on the system menu.

Be aware that connecting the RTCU to a CAN network can be dangerous. If the RTCU is not configured with the correct network parameters, it will lead to network corruption and may interfere with other connected equipment on the bus. Especially in vehicles great precautions must be observed to prevent communication interruptions.

By default the write capability on the CAN bus is enabled. This can be disabled by software jumper in the user application or in the system menu of the display.

A wide range of software functions is available for easy access to the network. Please consult the M2M Control IDE documentation for further information.

### CAN pins.

Group	Pin	Name	Description
8	37	CAN-H	CAN-bus H-signal
	38	CAN-L	CAN-bus L-signal
	39	GND	Signal ground

---

<sup>1</sup> Assuming use of a CAT5 twisted pair cable

## RS232 Port 1


This port can be used as a general-purpose RS232 serial port and does not support any hardware handshaking.

### RS232 port 1 pins

Group	Pin	Name	Description
9	40	RS232 1 TX	Transmit data from serial port 1, RS232 compatible
	41	RS232 1 RX	Receive data for serial port 1, RS232 compatible
	42	GND	Signal ground

## RS232 Port 2

The port is a general-purpose RS232 port with all control signals according to EIA-561 which defines RS232 on a modular connector.

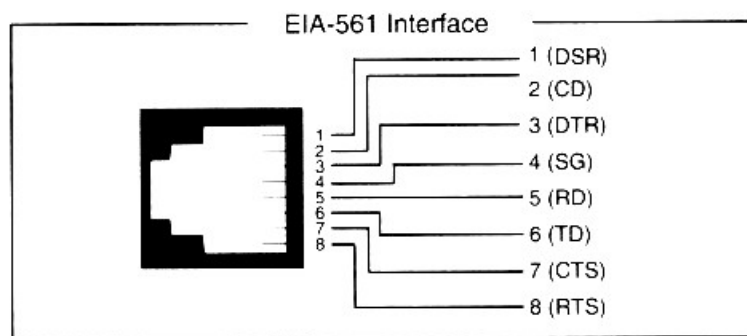

The signals are available on the RJ-45 connector located on the top side of the CX360 device.

### SER2 connector overview, fully RS232-compatible (RJ-45)

Pin	Name	Description
1	DSR	Data Set Ready
2	DCD	Data Carrier Detect
3	DTR	Data Terminal Ready
4	GND	Signal Ground
5	RD	Receive Data for serial port 2
6	TD	Transmit Data from serial port 2
7	CTS	Clear To Send
8	RTS	Request To Send

## RS485 Communication Ports (EIA/TIA-485-A compatible)

RS485 is a multi-drop network with a maximum of 32 nodes connected simultaneously to the bus. The RS485 bus contains an RS485+ (*also known as RS485 A, non-inverting*) and an RS485- (*also known as RS485 B, inverting*) signal as well as a signal ground, which must always be connected to the common signal ground for all nodes connected to the RS485 bus!

The maximum cable length for the RS485 bus is according to the EIA/TIA-485-A standard (max. 1000m @ <100kbit); this limit is highly influenced by the quality of the cable, signaling rate, noise etc.

At longer cable lengths, noisy environments, or high communication speeds, it might be necessary to terminate the transmission line with a 120<sup>1</sup> ohm resistor at each end of the transmission line to terminate it and avoid signal reflections. If the CX360 is used as an endpoint node, the software jumper for both RS485 ports separately can be activated through the user application or in the system menu of the display in order to terminate the RS485 communication lines with 120Ω.

By default the RS485 communication lines are not terminated with 120 Ω. Please consult the M2M Control IDE documentation for further information on how to use the software jumpers and the LCD display section in this document for using the system menu.

**Please note:** For best performance, protection and noise immunity shielded cable advised to be used to connect the device to RS485 communications bus.

### RS485 Port 1

#### RS485 port 1 pins

Group	Pin	Name	Description
10	43	RS1A	RS485 non-inverting signal for RS485 port 1
	44	RS1B	RS485 inverting signal for RS485 port 1
	45	GND	Signal ground

### RS485 port 2

#### RS485 port 2 pins

Group	Pin	Name	Description
11	46	RS2A	RS485 non-inverting signal for RS485 port 2
	47	RS2B	RS485 inverting signal for RS485 port 2
	48	SGND	Signal ground

<sup>1</sup> Assuming use of a CAT5 twisted pair cable

## 1-Wire Bus

All 1-Wire communication goes through a single connection, and all 1-Wire devices connected to this connection retrieves its power directly from the bus (called parasitic power). For this only two wires are needed – the 1-wire signal and the ground reference – allowing minimal cable installations.

For 1-Wire ID-Button readers, which include a built-in LED, a dedicated output is available for this purpose. Please consult the M2M Control IDE documentation for further information.

For further information regarding the 1-wire concept, please refer the M2M Control webpage.

### 1-Wire pins

Group	Pin	Name	Description
12	49	1-Wire	1-Wire bus for communication
	50	1-Wire LED	1-Wire ID-Button LED
	51	GND	Signal ground

## DC-Out

A 5 VDC output is available to power external equipment. It is possible to control the output in order to save power. The output is short circuit- (to ground), ESD- and transient protected. Make sure not to exceed the current specification of the output and be aware, that in-rush currents of the external equipment may exceed the specifications. It is recommended to install a fuse to protect the output.

This output must be enabled from the application. Please consult the M2M Control IDE on-line manual for more information.

Please note that the two DC Out pins are tied together internally, and the limitation of 300mA is the total consumption on both pins.

### Connector X1: 6-pin SER1 connector overview

Group	Pin	Name	Description
13	52	DC Out	+5V / 300 mA DC-OUT for external equipment.
	53	DC Out	+5V / 300 mA DC-OUT for external equipment.
	54	GND	Signal ground



## Audio Interface

The audio interface is available on the three 3.5mm jack connectors on the bottom side of the device. The audio interface includes a line output, microphone input and speaker output.



### Connector SPK Out

Pin	Name	Description
Tip	SPK_OUT_P	Differential speaker positive (+) output
Ring	SPK_OUT_N	Differential speaker negative (-) output
Sleeve	N.A.	Not connected internally

### Connector Mic In

Pin	Name	Description
Tip	MIC_BIAS	Bias voltage to the microphone
Ring	MIC_IN	Audio signal from the microphone
Sleeve	GND	Signal ground


### Connector Line Out

Pin	Name	Description
Tip	LINE_OUTL	Line output left channel
Ring	LINE_OUTR	Line output right channel
Sleeve	GND	Signal ground

The specifications on the audio interface connectors are as following:

Parameter	Min.	Typ.	Max.	Unit	Description
Impedance	4	-	-	$\Omega$	
Output power	-	-	2.1	W	@ 4 ohm 50pF load
	-	-	1.4	W	@ 8 ohm 50pF load
Headphone impedance	16	-	-	$\Omega$	AC coupled
Full -scale input voltage	-	-	0.74	Vrms	
Stereo line-out impedance	-	10	-	K $\Omega$	
Stereo line-out full-scale voltage	-	0.67	-	Vrms	
Mic. bias voltage	-	2.5	-	V	$\pm 10\%$

## LCD Display with Touch

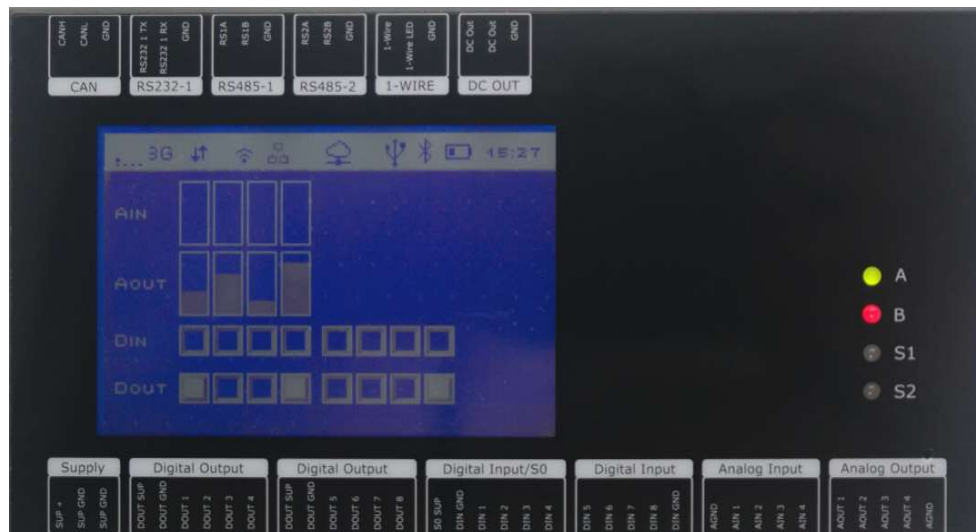


### Graphical LCD Display

The display mounted on the CX360 is a 240x160 pixel white on blue graphical display with built-in resistive touch sensing.

A range of display functions are available for making graphical and alpha-numerical presentations of the data, user interaction with menus etc. The display is fully backward compatible with previous applications using the on-board LCD Display.

By default the display is powered on at startup and shows I/O status, battery status and the status of many of the communication interfaces, as shown in the following picture:

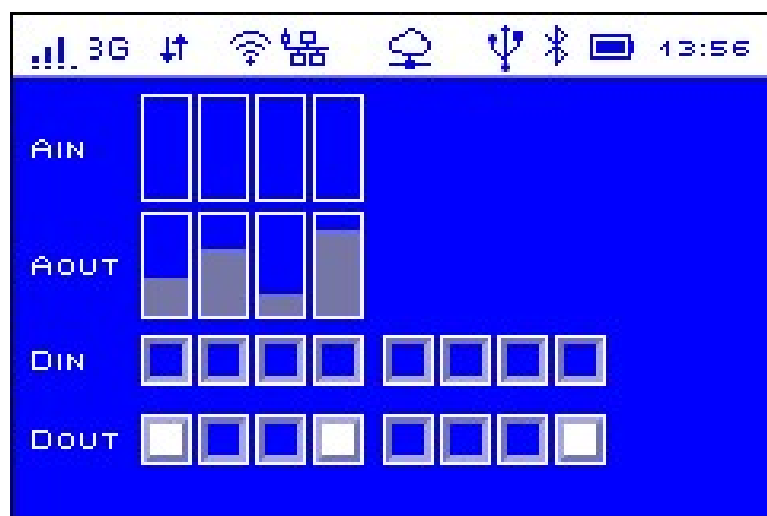

In the main part of the display, the status of the different input and outputs are shown. On the top, the analog inputs and outputs uses bar graphs to show the current value. Below the analog values, the digital inputs and outputs are shown, in groups of 4.







The top 20 pixels are reserved for the status bar, which shows the status of the different communication interfaces as well as the time and the battery status. The status bar provides access to monitoring and configuring the device.

Clicking on an icon on the status bar can show a dialog with more detailed information, if it is enabled in the configuration dialog or with the SOS setting `gui.status.details_allowed`.



The icons on the status bar from left to right are:

## GSM

### GSM Status




Status	Icon
GSM off	
GSM on	
Signal strength	   

### GSM network type

Status	Icon
2G	
3G	


Clicking either GSM status or GSM network status may show a dialog with details about the connection, including signal strength and the provider PLMN.

**Mobile network status**

Status	Icon
Network connected	
Roaming	
Network connected while roaming	




Clicking this icon may show a dialog with the status of the network connection, including IP

**Call status**

Status	Icon
Call active	




Clicking this may show the GSM status dialog.

**Network****Wi-Fi Status**

Status	Icon
Wi-Fi Off	
Wi-Fi on	
Wi-Fi signal level	




Clicking this icon may show a dialog with the Wi-Fi details, including SSID, IP address and signal strength.

**LAN 1 status & LAN 2 status**

Status	Icon
LAN off	
LAN on	
LAN connected	


Clicking this icon may show a dialog with the LAN details, including IP address.

### RTCU Gateway status

Status	Icon
RTCU Gateway not enabled	
RTCU Gateway enabled	
RTCU Gateway connected.	



Clicking this icon may show a dialog with the Gateway details, including the name of the Gateway and the used interface.

### USB status

Status	Icon
USB host supported	







Clicking this icon may show a dialog with the USB details, including the status of the host port and the USB programming cable.

### Bluetooth status

Status	Icon
Bluetooth off	
Bluetooth on	

Clicking this does not currently do anything.

### Power status

Status	Icon
Battery level	     

The battery level is indicated with five levels; the fully filled battery icon means fully charged and the empty battery icon means low battery level. While charging the battery the battery icon is animated to show all the levels with a one second delay.

Clicking the battery icon may show a dialog showing the power status, including the battery level, supply type and the temperature.

## The Clock


The clock shows the current time on the RTCU and can be used to access the system menu.

In addition to the IO status, the main part of the display can also be used for custom drawing using the display API or for powerful GUI applications using the GUI API.

The display functions are fully supported and uses on-screen touch buttons for user input, with the remaining area providing space for 6 rows of 23 characters.



Using the GUI functions, it is possible to create custom forms with a number of different controls, taking full advantage of the touch screen for creating intuitive user interaction.

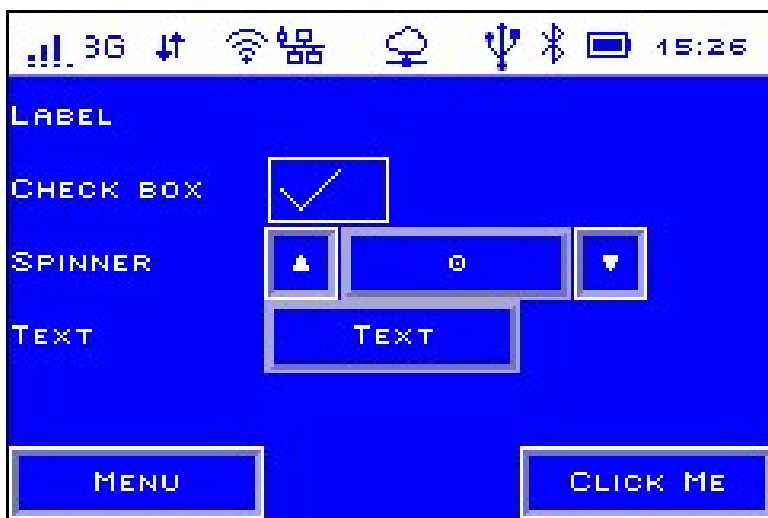

## System Menu

The system menu can be used to configure some properties of the device.

To use the system menu, it must be enabled, either via the IDE or with the guiSysMenu functions.

By default, the system menu is enabled, using the password “RTCU”.

To access the system menu, press the clock icon on the status bar for more than 1 second and release. A dialog now appears requesting the password. Note, that the password is case sensitive, and that the keyboard defaults to lower case letters.



Once the password has been entered successfully, the clock changes color, and by clicking it, the system menu is shown.

The system menu contains the following items:

### Set Time

Shows a dialog to show and change the time in the device.

### Config

Shows the configuration dialog, which can be used to configure some settings.



- Show details without login.
  - Provides read-only access to the system menu and the details on the status icons.
- Admin timeout
  - The number of seconds of inactivity before the system menu logs out automatically. Set to 0 to disable automatic logout.
- Run on battery
  - Controls if the device continues to operate on the battery when external power is removed.

## Jumpers

Shows a dialog for configuring the virtual jumpers in the device.



The jumpers are applied when the dialog is closed.



## Log out

Logs out of the system menu.

## About

Shows an about dialog, showing information about the system.

## LED Indicators

Four bi-colored (red and green) and a single yellow LED indicator are present on the front of the device (see graphical overview).

Two bi-colored LED's (A and B) are available to the user and the remaining two LED's (S1 and S2) are signaling the status and possible errors of the RTCU device.

### User LED A and B

LED A and B are composed of four individually controllable LEDs:

- LED named A on the front consists of LED 1 (green) and LED 2 (red).
- LED named B on the front consists of LED 3 (green) and LED 4 (red).

They are easily accessed from within the application program, and it is possible to mix the LED's to obtain a third color: yellow. Please consult the M2M Control IDE documentation for more information.

### System LED S1 and S2

The RTCU is equipped with two system LED's, which shows the status and possible errors of the RTCU device.

The different patterns are listed in the table below. If the color of the system LED S1 is yellow, the device is actively communicating with the M2M Control IDE (or another program, supporting the RTCU RACP protocol).

The LED S2 is signaling either the GSM module activity, or if all other LED's are off, that the RTCU is in the "wait for event" low power state.

### S1: System LED1 pattern overview

Pattern	Description
Fastest blinking, green	The device is initializing, preparing to start the application.
Fast blinking, green S2 On, green	The device is installing an update. Depending on the kind of update, it may take some time. The progress can also be observed on the display.
Fast blinking, green <sup>1</sup>	The device has been forced into recovery mode with the use of the system switch. The application is not executing.
500ms On / 500ms Off green <sup>Fehler!</sup> Textmarke nicht definiert.	The device is executing the application program
1.5s On / 0.5s Off. green <sup>Fehler!</sup> Textmarke nicht definiert.	The device is executing the application program, while charging the internal back-up battery.
Fast blinking, red <sup>Fehler!</sup> Textmarke nicht definiert.	A runtime error has been detected in the program. Use the M2M Control IDE to obtain the fault log.
Alternating Fast/Slow, red <sup>Fehler!</sup> Textmarke nicht definiert.	The device has lost its firmware. This can only happen if, during a firmware upgrade, the RTCU device loses power or the communication is lost completely. In this case, simply upload the firmware to the device again.
75ms On / 925ms Off, green	Execution speed is different from full-speed.
On yellow (All other Led's OFF)	The device is booting, initializing the system

### S2: System LED2 pattern overview (GSM activity and "Wait For Event")

Pattern	Operating Status
Off	The GSM module is turned off
600 ms On / 600 ms Off green	Missing SIM card or PIN code. Network search and logon in progress.
75 ms On / 3 s Off green	Logged on to the network.
75 ms On / 75 ms Off / 75 ms On / 3 s OFF green	A GPRS session is active.
Flashing green	Indicates GPRS data transfer.
On green	A voice session is active.
On green (and all other LEDs OFF)	The system is booting.
On yellow (and all other LEDs OFF)	The system is booting into recovery mode.
On red (and all other LEDs OFF)	The system is booting into monitor mode.
10 s OFF / 50 ms ON green (and all other LEDs OFF)	The RTCU device is in low-power "Wait For Event" state.

<sup>1</sup> Or yellow when communicating with the M2M Control IDE or another program, supporting the RTCU RACP protocol).

## DIP and Reset-Switches

### DIP-switch

The M2M Control CX360 device contains four DIP-switches, and three of them are available for the application to use (*fourth dipswitch is reserved for future use*).

The dip switches are located on the top side of the device for easy user access (see graphical overview).

### System switch (RST)

The M2M Control CX360 device contains a combined reset/diagnostic switch. This switch is accessible from the front of the unit (see graphical overview). It is necessary to use a small thin object with a diameter of approx. 2 mm, for example a straightened-out paper clip for this purpose.

By activating the switch shortly, the RTCU device will do a complete reset, as if the power was removed and reapplied.

If the reset switch is held down for approx. 3 seconds<sup>1</sup>, the device will instead enter recovery mode<sup>2</sup> and the application will not be started. In recovery mode the system will automatically turn on the GSM module to establish a connection to the GSM network and RTCU Gateway (if configured).

Pressing reset will also activate the device, when in power-down mode. If external power is removed and the backup battery is disabled, the reset switch can still be used to boot into recovery mode, as long as there is enough power left on the battery.

## Real Time Clock

The CX360 is equipped with Real Time Clock (RTC). This clock is a source for time measurement for the module timers and time stamping measurements stored in the logger.

The RTC can be set or synchronized manually using the M2M Control IDE or thru the display. An automatic synchronization can be programmed by the application using the M2M Control GPRS Gateway or acquiring the time from the mobile network (if supported by the MNO).

**Please note:** The RTC does not automatically adjust to summer/winter time. It is recommended to use UTC time to avoid loss of data during manual time adjustments.

**Please note:** The RTC clock is powered from the internal battery and as long as it is operational there is no need to set the time again after power-off. Since the clock precision is not absolute, periodical time adjustment may be necessary.

---

<sup>1</sup> System LED S2 will flash green three times when this state is entered.

<sup>2</sup> System LED S1 will indicate this state by fast blinking green or yellow.

## Battery Backup Power

### Rechargeable Li-Ion Battery

The CX360 contains an internal Li-Ion battery for operation even, when the external power is absent making it possible to report power loss etc. Please note that when external power is removed, the device will be powered down by default. This setting can be changed as documented in the M2M Control IDE documentation.

The analog outputs will be disabled when a power fail occurs as the internal battery cannot provide the supply voltage needed.

The battery charging is completely automated and handled internally by the RTCU device – leaving no need for user interaction. Different kinds of functions (Battery low, Charger enable, Charging status, etc.) are available to the user application.

The charge current is relatively high, for a shorter charge time, as specified in the technical specification. Make sure both power supply and cables can handle the high current.

The battery will be charged, whenever a power fail has occurred to establish the capacity thus making the battery ready for the next power fail.

By default the battery cannot be charged above 45°C or below 0°C. The RTCU offers charging down to -10 °C using a specialized algorithm to protect the battery.

If the temperature is above 45°C, the charging will not start and will be postponed, until it is below this threshold.

The temperature has a very high influence on the battery capacity. At 0°C the capacity has dropped to 60% of the initial capacity, and it falls dramatically at lower temperatures.

The battery cycle (numbers of charges and discharges) also influences the capacity. After 300 cycles the capacity has dropped to approximately 80% of the initial capacity.

### Warning

*Misusing the RTCU device may cause the built-in battery security circuit to be damaged.*

- *Do not place the RTCU device in high temperature locations such as in direct sunlight or near engines. Using the RTCU device in this environment may result in loss of battery performance and a shortened life expectancy.*
- *Do not expose the device to water, salt water or allow the battery to get wet.*
- *Avoid strong impacts and shocks.*

For more information regarding the environmental limitations, see “Specifications for M2M Control CX360 ” below or consult the CX360 datasheet.

## Lithium Battery

The M2M Control CX360 has an on-board Lithium coin-cell type battery, which in case of total power loss powers the SRAM (used by the persistent memory FRAM API) and the real time clock of the device.


Power from the Lithium coin-cell battery is only drawn, when there is no external power present and the rechargeable Li-Ion battery is fully exhausted. Expected lifetime of the Lithium coin-cell in this state is 6+ years.

**Please note:** shipping devices with Lithium batteries inside by air service have special regulations.

## External Li-Ion Battery (Optional)

External battery connection is possible on the terminal block connectors on the top side. Jumpers located on the back side of the device are used to switch between the internal and external battery.

**Please note:** Only Lithium Ion batteries (3.7V nominal) are allowed as external battery, and both battery switching jumpers (jumper 1 and jumper 2) must be moved together. Mixing the jumpers in different positions may cause abnormal operation, and in worst case damage the battery/device.

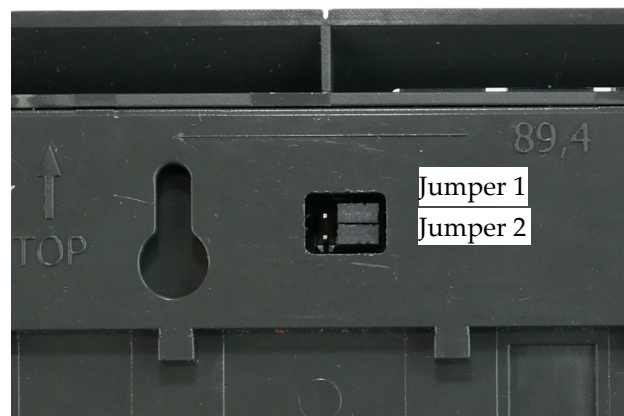

### Battery selection jumpers

Jumper	Position	Used battery
1	1-2	External battery (NTC temperature sensor)
	2-3	Internal battery(NTC temperature sensor, default)
2	1-2	External battery (positive (+) terminal)
	2-3	Internal battery(positive (+) terminal, default)

**Please note:** The jumper pins are exposed, when not covered by the jumper. When mounting the device in the installation make sure that the jumper pins don't touch any metal surfaces. Covering the battery selection jumper opening after installation/selection the desired battery is advised.

## Cellular Engine

### Worldwide LTE Cat. 4 Multi-Band Cellular Engine

The CX360 uses a worldwide LTE Cat. 4 Multi-Band Cellular Engine with the following features:

- Multi-band LTE Cat. 4, UMTS/HSPA+ and GSM/GPRS/EDGE coverage.
- Max. 150Mbps down / 50Mbps upload (Cat 4)
- LTE-FDD: B1/ B2/ B3/ B4/ B5/ B7/ B8/ B12/ B13/ B18/ B19/ B20/ B25/ B26/ B28.
- LTE-TDD: B38/ B39/ B40/ B41
- WCDMA: B1/ B2/ B4/ B5/ B6/ B8/ B19
- GSM: 850/900/1800/1900 MHz
- SMS (Text and PDU)
- UMTS release 7, max. 42Mbps down / 5.76Mbps upload, (Cat 6)
- Digitized audio / DTMF capability.

## Wi-Fi and Bluetooth

The M2M Control CX360 device contains a combined Wi-Fi and Dual-mode Bluetooth radio that shares the same antenna interface.

### Wi-Fi Technical Data

- Wi-Fi at 2.4 GHZ ISM bands.
- IEEE 801.11b/g/n/d/e/h/i.
- WPA/WPA2 certification.
- Up-to 150 Mbps.

### Bluetooth Technical Data

- Classic and Low-Energy (LE) Bluetooth.
- Bluetooth 2.1 + EDR up-to 3 Mbps.
- Bluetooth 3.0 and 4.0 Dual-mode.
- Intelligence co-existence with Wi-Fi.

## SIM-Card

The M2M Control CX360 device contains a standard mini-SIM card reader which is located on the bottom side of the unit (see graphical overview) for ease of access. The SIM card reader has a push/push eject system and a mechanical lock for secure installation of the SIM card. Please refer to Appendix A for a SIM card installation guide.

It is possible to detect the state of both the SIM Insert and SIM lock status from the application. Please consult the M2M Control IDE on-line manual for more information.

If the SIM-card is removed during GSM operation, the device will be rejected from the GSM network shortly after.

## **Antennas**

### **LTE/UMTS/GSM Antenna**

The M2M Control CX360 device contains an SMA female connector for connecting a suitable LTE/UMTS/GSM antenna. When installing the antenna, please make sure that the antenna is not in close proximity to metallic parts or anything else, that can influence the efficiency of the antenna. Please consult the installation guide that follows the antenna.

### **Wi-Fi / Bluetooth Antenna**

The M2M Control CX360 device contains an RP-SMA connector for connecting a suitable Wi-Fi / Bluetooth antenna. The Wi-Fi and Bluetooth communication circuit shares the same antenna, so only one single antenna is required.

When installing the antenna, please make sure, that the antenna is not in close proximity to metallic parts or anything else, which can influence the efficiency of the antenna.

Please consult the installation guide, which follows the antenna.

## SD-CARD reader

The M2M Control CX360 device has a standard SD-CARD reader which is located on the bottom side of the device (see graphical overview) The CX360 supports a FAT file-system for standard PC-compatibility with up to 32 GB capacity support.

The SD-CARD features a push/push eject system for reliable insertion and operation. Please refer to Appendix B for an SD-Card installation guide.

## Approved SD-Card's

*To ensure the highest performance and compatibility it is important to use SD-Card's that has been approved and tested by M2M Control.*

Commercial grade SD-Card's can be used in applications where the limited write endurance is acceptable - for example if the SD-CARD is often replaced. Commercial grade SD-Card's should **not** be used in applications where a potential failure on the media is considered mission critical.

For applications that uses the SD-CARD media extensively and where a failure is critical, it is recommended to use approved **Industrial Grade** SD-Card's.

M2M Control has approved and recommends industrial grade SD-Card's from **ATP** that are available in capacities from 512 MB to 32 GB.

ATP Industrial Grade SD/SDHC Cards are optimized for demanding industrial applications with consistent performance in all conditions. ATP uses reliable SLC flash technology with a flash endurance more than 20 times higher than commercial grade products with MLC flash.

The differences in write endurance between commercial grade MLC flash and ATP Industrial grade SLC flash is quite remarkable for write-intensive applications:

Product Line	Details	Total Writeable Data Prediction @ 1GB	Time Prediction @ 500 writes a day (1GB)
ATP Industrial Grade	SLC Flash	80,000GB	<b>5,740 days</b>
	+ Advanced Wear Leveling	or 2,800,000 writes	or <b>15.7 years</b>
Commercial Grade	Grade A MLC (2 bits per cell)	4,000GB	<b>280 days</b>
	+ Advanced Wear Leveling	or 140,000 writes	



## Product Identification Label with Barcode

The M2M Control CX360 product identification is found on the exterior of the device and contains a unique serial-number in readable form and also as a barcode.

The first three digits in the serial-number identify the device type, and for the CX360 this unique code is **312**



**Barcode format used:** 2/5 Interleaved with check-digit.

## Power consumption

Detailed information on the maximum power consumption of the CX360 device in different states and different supply voltages is listed below.

### Maximum power consumption: Device operating from external supply

	8V	12V	36V	
Device active	152	103	36	mA
Device active with GSM on*	194	130	46	mA GSM idle @ -63dBm* (2G)
Device active with GPRS session*	375	250	88	mA GSM @ -65dBm, LCD off, Battery not charging*
Device active with LCD on	160	109	39	mA
Device active while charging	1020	650	232	mA
Device in power-down	1.7	1.1	0.53	mA Restart on DIN1, RTC
Device in "wait for event"	7.4	4.6	1.8	mA Resume on DIN, RTC
Device in "wait for event"	16	10	4	mA Resume on CAN

If the external power source is removed and the internal battery is enabled the power consumption from the battery will be as listed below.

### Maximum power consumption: Device operating from internal battery


	BAT	
Device active	275	mA
Device active with GSM on	360	mA GSM idle @ -63dBm
Device active with GPRS session*	865	mA GSM @ -65dBm, LCD off,
Device active with LCD on	290	mA
Device in power-down	2.5	mA Restart on DIN1, RTC
Device in "wait for event"	11.5	mA Resume on DIN, RTC
Device in "wait for event"	85	mA Resume on CAN

**Note:** Power consumption from the battery @ 3.8V

**Note:** Values marked with (\*) is average and should be considered as guidelines as they may vary depending on the GSM signal strength.

## Appendix A – Removing the Protective Film


The M2M Control CX360 device is delivered with a thin almost invisible transparent protective film on the front label. To ensure the best visibility of the LCD-display it is advised to remove this film before using the device.

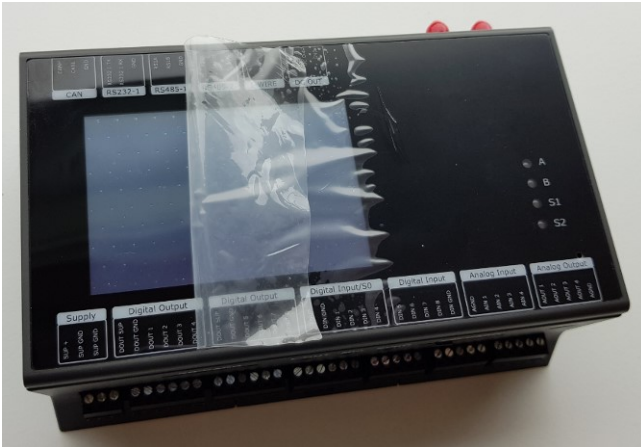

The protective film is removed by firmly removing it as shown above.

## Appendix B – Installing the SD-CARD

To insert a card into the reader, orientate it as shown below and push the card into the reader until a click sound occurs. Remove the card by pushing it into the reader, until it clicks and the reader will eject the card. Avoid removing the SD-CARD during access to the card.

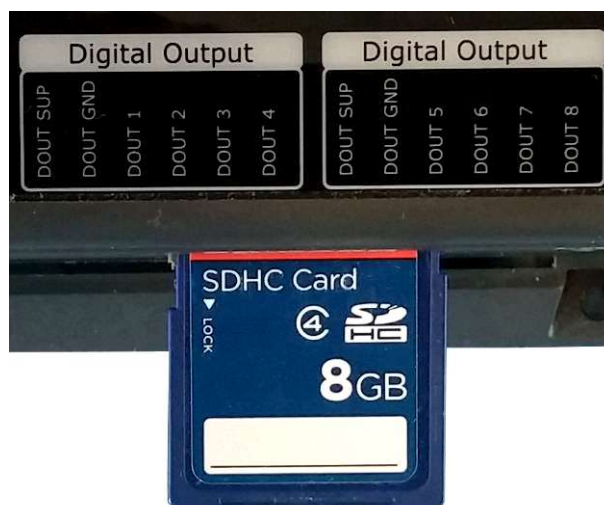


**SD-CARD orientation**

## Appendix C – Installing the SIM-Card

The external accessible SIM card reader has a push/push eject system and a mechanical lock for secure installation of the SIM card.

Orientate the card as shown below, and insert it into the card reader. Push the card into the reader, until a click sound occurs – the card will now stay in its position. It might be necessary to use a small tool or pencil as the card, for protection purposes is placed underneath the enclosure surface. Furthermore, a mechanical slide lock can be used, to prevent it from being removed accidentally.

To remove the card, slide the lock to its unlocked position and push the card into the reader, until a small click sound occurs. The reader will now eject the card. It might be necessary to use a small tool or pencil to push the card into the reader.

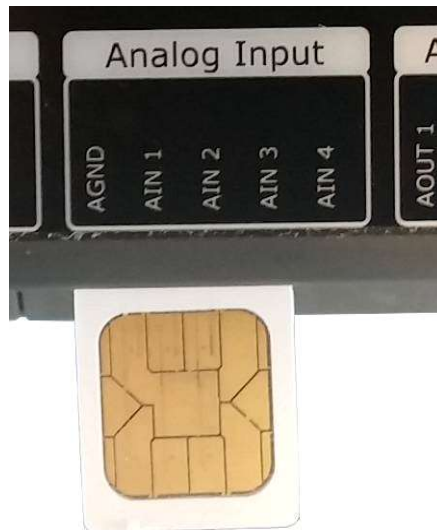

**SIM card orientation**

## Appendix D - Open Source Disclaimer

The M2M Control CX360 products include several open source software tools. This open source software is governed by the terms and conditions of the applicable open source license, and you are bound by the terms and conditions of the applicable open source license in connection with your use and distribution of the open source software in this product.

Please refer to the separate document "**RTCU Open Source Licenses.pdf**" for detailed information about the packages used in the CX360 product.

## M2M Control CX360 Specifications

### RTCU M2M Platform

- NX32 for Linux - NX32L.
- Fully NX32 compatible.
- Larger capacity and higher performance compared to NX32.
- Open and user-extendable API\*.

### NX32L Hardware Core

- Cortex-A5 32-bit ARM processor.
- Hardware floating point and DSP.
- 128 MByte LP-DDR RAM.
- 512 MByte NAND flash.
- 16 MByte NOR flash.
- 8 MByte Dataflash.
- 128 KByte SRAM with battery-backup.
- Real-time clock with battery-backup.

### Security

- Embedded firewall.
- TLS/SSL support with full certificate management.
- TLS/SSL support for SMTP, MQTT, FTP, HTTP, Gateway 2 and TCP/IP sockets.
- Hardware assisted strong encryption/authentication: AES-128, AES-192, AES 256, DES, TripleDES, HASH, RND and RSA signature.

### Storage

- Persistent data flash.
- Non-volatile SRAM.
- Internal flash drive (Up-to 512 MByte).
- Circular datalogger.
- SD-CARD.
- USB flash media.

### Cellular Engine

- Multi-band LTE Cat. 4 (Worldwide)  
LTE FDD: 15 bands.  
LTE-TDD: 4 bands.  
WCDMA: 7 bands.  
GSM: Quad-band.
- DTMF decoding / transmission.
- Digitized voice playback / IVR.
- External SIM card-reader, with Mini-SIM 1.8/3 volt.
- Optional eSIM.

### Wireless LAN

- WiFi at 2,4 GHz ISM bands.
- IEEE 801.11b/g/n/d/e/h/i.
- WPA/WPA2 certification.
- Up-to 150 Mbps.

### Bluetooth

- Classic and Low Energy (LE).
- Bluetooth 2.1 + EDR up-to 3 Mbps
- Bluetooth 3.0 and 4.0 Dual mode.
- Intelligent co-existence with WiFi.

### Optional Wireless

- Wireless M-Bus.
- ZigBee / IEEE 802.15.4.

### Audio

- Fully digitized audio system.
- Transfer, store and play audio.
- Line and amplified speaker output.
- Microphone input.
- Digitized GSM audio.

### Wired Communication

- 100BASE-T Ethernet interface.
- Full CAN2.0B with hardware filtering and multi-speed support.
- 2 x RS232. One with control signals.
- 2 x RS485.
- 1-Wire bus.
- USB host port.
- USB service/programming port.

### User Interaction

- Dot-matrix LCD with 240x160 pixels,
- White-on-blue back-lit.
- Status-bar with information on all interfaces.
- Fully programmable with high-level functionality such as graphs, buttons, dialogs etc.
- Touch screen with virtual buttons.
- C350/C3360 compatibility mode.
- 4 x bi-colour LED.
- DIP-switches.
- I/O configuration jumpers for analog mode.
- Virtual jumpers for RS485 and CAN termination
- Reset / recovery switch.



## Digital I/O Interface

- 8 x digital solid-state digital output.  
Max. 36 volt / 1.5 A per. channel.  
Short-circuit, ESD, Inductive kick-back protected up to 20 mH.  
User supplied power.
- 8 x digital inputs.  
Logic high: 8 to 40 VDC.  
Logic low: -5 to 3 VDC.  
Impedance: 3.3kohm @ 12V.
- 4 x IEC62053-31 Class A input.
- Digital input #1 can be used as ignition.

## Analog I/O Interface

- 4 x analog inputs.  
Range is 0..10VDC or 0..20 mA  
Resolution: 12 bit  
Accuracy: Typ.  $\pm 0.3\%$  FSR @ 25°C  
Impedance: 40 kohm (V)/504 ohm (C).
- 4 x analog outputs.  
Range is 0..10VDC or 0..20 mA  
Resolution: 12 bit  
Accuracy: Typ.  $\pm 0.3\%$  FSR @ 25°C.
- Protected against transients and low-pass filtered.

## Electrical

- Operating voltage: 8 to 36 VDC.
- Short and reverse power protected.
- 5 VDC-out @ 300 mA.
- USB 5 VDC @ 500 mA.

## Battery and Charger

- On-board 2Ah (nominal) Li-Ion battery.
- Intelligent charger with temperature throttle and sub-zero degrees support.
- Integrated battery temperature sensor.
- Support for larger external battery.

## Power Management

- Low-power modes.
- Wait for Event: Timer, Digital input, Touch screen, RS232\*, CAN, GSM\*, Power change state.
- Wait for event, from: 2 mA@12V.
- Supervision of supply voltage / type.

## External Interfaces

- SD-CARD slot with presence and write protect detection.
- Audio line-Out. 3.5mm mini-jack.
- Speaker-Out. 3.5mm mini-jack.
- Microphone. 3.5mm mini-jack.
- SIM-card slot for micro-SIM with lock and presence detection.
- Service-port (Mini USB-B).
- RJ45 for RS232 (EIA-561).
- RJ45 for LAN with LED indicators.
- USB host-port (USB-A receptable).
- SMA female connector for UMTS.
- RP-SMA connector for Wi-Fi/Bluetooth.
- Pluggable terminal blocks with 3.5 mm pitch and M2 screw:

## Expandable

- I/O expansion Modbus modules.
- RFID-Reader\*.
- GPS receiver.
- Additional Ethernet port.
- Additional RS232 / RS485 ports.
- Industrial USB hub.
- Camera with HD video streaming\*.
- Speaker and microphone.
- External battery pack.

## Physical Characteristics

- Encapsulation: 9M DIN-rail (EN60715)
- Colour: Dark-Grey.
- Material: Self-extinguishing blend PC/ABS.
- Approx. 465 gram without accessories.
- W 160.2 x H 89 (top) x D53.5 mm.  
(without connectors and terminal blocks).

## Environmental Specification

- Operating temperature: -30 to 60°C.
- Battery charge temperature:  
-10 to 45 °C
- Recommended storage temperature:  
0 to 45°C.
- Humidity: 5..90% (non condensing).
- Ingress Protection: IP20 .

## Approvals

- 2014/53/EU Radio Equipment Directive.
- 2014/30/EU EMC Directive
- 2011/65/EU RoHS Directive.

## Warranty

- Two-years return to factory parts and labor.
- Optional warranty up to 5 years.  
(restrictions apply).

Technical data are subject to changes.

**Infranet Technologies GmbH**  
**Tempowerkring 19**  
**21079 Hamburg**  
**Germany**

**Fon: +49 40 696 47 – 260**